



NetVanta 2050/2054/2100 Front Panel Layout

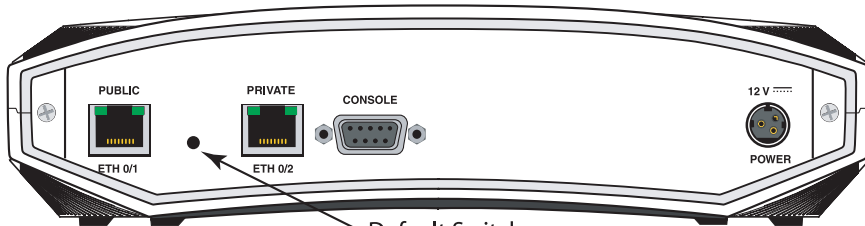

NetVanta 2050/2100 Rear Panel Layout

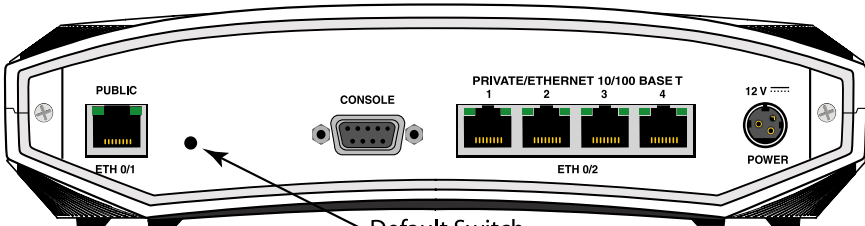

NetVanta 2054 Rear Panel Layout

GETTING STARTED

Two configuration methods are available for your NetVanta Internet security appliance:

- Web-based GUI
- AOS Command Line Interface (CLI)

The GUI lets you configure the main unit settings and provides online guidance and explanations for each setting. However, using the AOS CLI may be necessary for more advanced configurations.

ACCESS THE GUI

You may access the web-based GUI from any web browser on your network by following these steps:

1. Connect the NetVanta directly to your PC using the **PRIVATE ETH 0/2** port on the back of the unit. Alternatively, you may connect the NetVanta to your PC through a hub or switch.
2. During bootup the PC obtains an IP address from the NetVanta 2000 DHCP server or you can manually set your PC to a fixed IP address of 10.10.10.2. If you cannot change the PC's IP address, you will need to change the unit's IP address using the CLI. (Refer to the next two sections for instructions.)
3. Enter the unit's IP address in your browser address line. The default IP address is 10.10.10.1.
4. You will then be prompted for the username and password (the default settings are **admin** and **password**).
5. The initial GUI screen appears.

ACCESS THE CLI

Access the AOS CLI via the **CONSOLE** port or a Telnet session. To establish a connection to the NetVanta router **CONSOLE** port, you need the following items:

- VT100 terminal or PC (with VT100 terminal emulation software)
 - Straight-through serial cable with a DB-9 (male) connector on one end and the appropriate interface for your terminal or PC communication port on the other end
1. Connect the DB-9 (male) connector of your serial cable to the **CONSOLE** port on the rear panel of the unit.
 2. Connect the other end of the serial cable to the terminal or PC.
 3. Insert the connector of the provided AC adapter into the **POWER** interface on the rear panel of the unit, and plug the cord into a standard electrical outlet.
 4. Once the unit is powered up, open a VT100 terminal session using the following settings: 9600 baud, 8 data bits, no parity bits, and 1 stop bit. Press **<Enter>** to activate the AOS CLI.
 5. Enter **enable** at the **>** prompt.
 6. Enter the enable password when prompted. The default password is **password**.



The configuration parameters used in the examples outlined in this document are for instructional purposes only. Please replace all underlined entries (example) with your specific parameters to configure your application.

CONFIGURE THE UNIT'S IP ADDRESS

The following steps create an IP address and subnet mask for **PUBLIC ETH 0/1**. If you are not sure what IP address to assign, please contact your network administrator.

1. At the **#** prompt, enter **config terminal**.
2. At the **(config)#** prompt, enter **interface eth 0/1** to access the configuration parameters for the Ethernet port located on the rear of the unit.
3. Enter **ip address 10.26.12.12 255.255.255.0** to assign an IP address to the Ethernet port using a 24-bit subnet mask.
4. Enter **ip route 0.0.0.0 0.0.0.0 10.26.12.254** to add a default route to the route table. If necessary, contact your network administrator to obtain the IP address (and subnet mask) for your particular configuration.
5. Enter **no shutdown** to activate the interface to pass data.
6. Enter **exit** to exit the Ethernet interface commands and return to the Global Configuration mode.

ENABLE TELNET ACCESS

The following steps create a password of **adtran** for Telnet access. By default, Telnet access is enabled with a password of **password**.

1. Verify that the prompt of your unit displays **(config)#**.
2. Enter **line telnet 0 4** to change the configuration parameters for the Telnet sessions.
3. Enter **login** to initiate Telnet access.
4. Enter **password adtran** to change the login password for the Telnet sessions.
5. Enter **exit** to return to the Global Configuration mode.
6. Verify that the prompt of your unit displays **(config)#**.
7. Enter **do write memory** to save the current configuration.

FACTORY DEFAULT SWITCH

- If the factory default switch is pressed and held for 5 seconds after boot, the **PUBLIC ETH 0/1** port will default to DHCP, and the IP address and access policies will be removed from VLAN 1. At the same time, the **CONSOLE** port will default to 9600 baud, 8 data bits, no parity bits, and 1 stop bit.
- If the factory default switch is pressed and held for 30 seconds, a default configuration will overwrite your existing configuration and reboot the unit.

CONFIGURE YOUR APPLICATION

More detailed documentation for configuring your ADTRAN unit is provided on the *ADTRAN OS System Documentation* CD included in your shipment. For more detail on hardware setup, refer to the Hardware Installation Guide. For more detail on configuring your system, refer to the *ADTRAN Operating System (AOS) Command Reference Guide*, configuration guides, and technical support notes.



Important: For additional details on product features, specifications, installation, and safety, refer to the appropriate *Hardware Installation Guide* on the *ADTRAN OS System Documentation* CD shipped with the base unit and available online at www.adtran.com.

CONSOLE PINOUTS

Pin	Name	Description
1	DCD	Data Carrier Detect (output)
2	RD	Receive Data (output)
3	TD	Transmit Data (input)
4	DTR	Data Terminal Ready (input)
5	SG	Signal Ground
6	DSR	Data Set Ready (output)
7	—	Unused
8	CTS	Clear to Send (output)
9	—	Unused

ETHERNET PINOUTS

Pin	Name	Description
1	TX1	Transmit Positive
2	TX2	Transmit Negative
3	RX1	Receive Positive
4, 5	—	Unused
6	RX2	Receive Negative
7, 8	—	Unused